




Preparing a Door Frame for Future Wired Hardware

Single Door - Two Frog SHORT Kit
Model No. FRGK-2S

EH2 - Electric Hinge

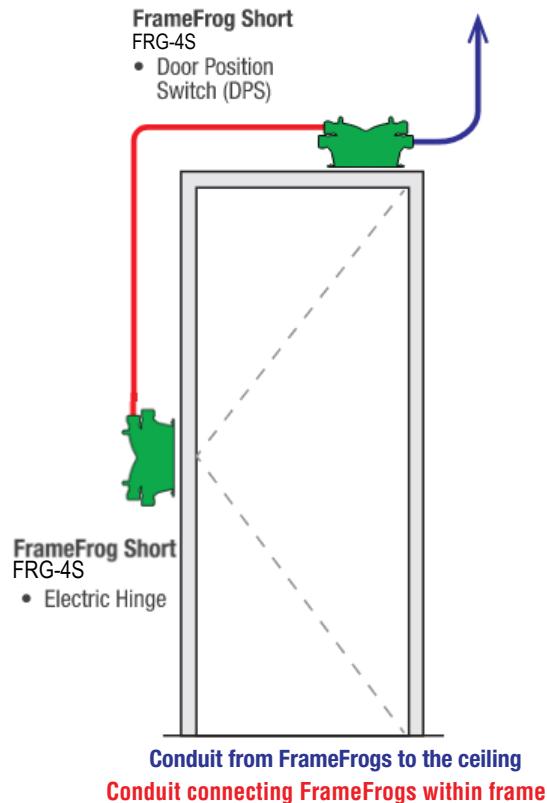

Recommended Frame Preparation

- Electric Hinge Prep at Center Hinge (3/4" Hole for wires)
- 4.875" x 1.25" DPS Prep in Head with flush cover plate
- Standard Strike Prep
- Omit metal back box (mortar and dust boxes) wherever FrameFrog is installed

Implications for this Layout


- Committed to Electric Hinge for powering the lock
- EPT and Electric Strike are not an option
- Adds cost of DPS prep only

EH2



Single Door Kit Contents

Model No.
FRGK-2S

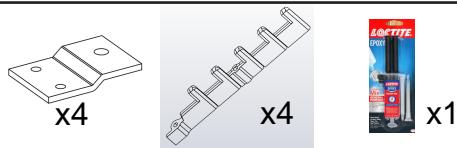Frame Frog Short FRG-4S	2	
1/2" PVC Conduit - 40" Long	2	
1/2" PVC Sweep elbows - 4" R	1	
Weld Clips (Suffix WC) Wing Tabs (Suffix WT) Epoxy for FRP (Suffix EPOX)	See Images	
PVC connectors	1	
1/2" EMT connector	1	
3/4" EMT connector	1	
Threaded 1/2" PVC Connector	1	
QR code door labels	1	

2026.1

Common Configurations

Consult Hardware Specialist For Other Configurations And Implications